

There are two types of batteries: autodraw (no button) & adjustable temperature. The instructions below are for adjustable temperature batteries, but also apply to autodraw batteries when steps 2, 3, and the button-related instructions from step 4 are skipped.

## 1 **Attach Cartridge**

using a clockwise motion until secure. Do not overtighten the cartridge.

1

## 2 **Unlock Battery**

by pressing the draw button with five rapid clicks.

2

## 4 **Inhale Medication**

Hold down button and breathe in for 2-3 seconds. Release button and exhale.

4

## 3 **Adjust Heat**

by turning the dial at bottom of the pen. 2.5v to 3.5v is the recommended setting.

3



## CHARGING INFORMATION

**Adjustable Temperature Batteries:** A red blinking draw button indicates the need for recharging. Charge until indicator button is green, around 30 min. It's best to charge using USB port, like a computer or car, not a USB block in the wall.

**Autodraw Batteries:** Charging indicator lights vary by model, but usually the light either blinks or turns a different color to signal the need for charging. Charge for 30 minutes in a USB port.

## TIPS FOR ADJUSTABLE TEMPERATURE BATTERY USE:

- As you increase the heat setting, you increase the amount and the temperature of vapor being produced.
- Lock the battery using five rapid clicks when it is not in use. This prevents the battery from being accidentally turned on and product wasted.
- Press the draw button twice to enter preheat mode. This allows thicker oil to be vaped more effectively. Preheat mode will not turn off until button is pressed.